

BRAMAH FITTING INSTRUCTIONS

For ROLA SW Wooden Sash Window Stop

Tools required

Brace with 16mm (21/32") wood bit
Bradawl
Pencil
Rule

1 With the window closed, mark and drill 16mm hole on the vertical section of the window frame to a depth of 25mm (1"). The hole should be as close as practical to the horizontal section of the window frame, but not less than 12mm.

2 Fit Rola SW into the drilled hole and secure with the two N°6 x 3/4" c'sunk woodscrews provided. The Rola SW can be recessed if required.

3 A separate 18mm (3/4") rectangular stop plate is available to protect the internal window frame (R1/09).

Note, if a ventilation gap is required, fit a second unit 100mm (4") above previously fitted one.

It is recommended that one Rola SW be fitted to each side of windows in excess of 600mm (24") width.


If the bottom sash has a tapered top or the windows are 'sloppy' it is recommended that a 31mm Removable Rola S stop be fitted (R1/04 or R1/05).

Contact Details

Enquires, catalogues, requests for quotes and all matters historical, not on this CD, can be directed to sales at any one of our three business units at **Bramah, 31 Oldbury Place, London W1U 5PT** or by the following contact numbers:

Lock Manufacturing - Bramah and Rola Lock sales

Alpha Dial Telephone: +44 (0) 8700 BRAMAH (272624)
Facsimile: 44 (0)20 7935 2779
Email: lock.sales@bramah.co.uk

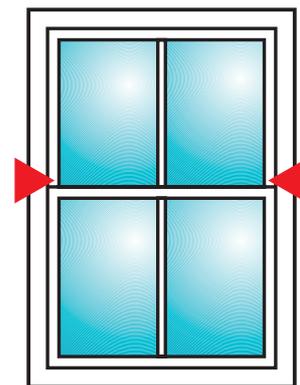

Application

