


# BRAMAH FITTING INSTRUCTIONS

## For ROLA C Wooden Casement Window Lock

### Tools required

Brace with 10mm (13/32") wood bit  
Bradawl  
Countersink  
Pencil  
T handled 6mm Allen key (R8/01) if required  
Rule

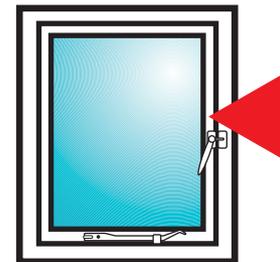

Application

**1** Remove Rola lock A from the threaded insert using a Rola key.

**2 Square section frames.** With the window closed, mark, drill and lightly countersink a 10mm hole on the vertical section of the window. The hole centre should be 8mm from the edge of the window frame, 18mm deep.

**For windows with off square section frames,** the 10mmØ hole drilled and fitted must be parallel with the frame not the window, otherwise screw threads will cross and the lock will not function.



**3** Use a T handled 6mm Allen key to screw the threaded insert into the window frame.

**4** Fit Rola lock A into threaded insert using the Rola key.

**5** Screw Rola lock to frame using screws provided (pilot holes are recommended to prevent damage to frame).

### Contact Details

Enquires, catalogues, requests for quotes and all matters historical, not on this CD, can be directed to sales at any one of our three business units at **Bramah, 31 Oldbury Place, London W1U 5PT** or by the following contact numbers:

### Lock Manufacturing - Bramah and Rola Lock sales

Alpha Dial Telephone: +44 (0) 8700 BRAMAH (272624)  
Facsimile: 44 (0)20 7935 2779  
Email: lock.sales@bramah.co.uk

